 

 

 
 
 

 
 


 

 

 
 
 
 
 
 


 
 
 
 
 





**Originalfernbedienung**   **Ersatzfernbedienung**

	Power		Power
	Recharging		Eco / Aspect
	Auto		Auto
	Spot		Source
	Max		Mode
	Up		Up
	Right		Right
	Left		Left
	Start/Stop		Enter
	Manual		Comp / Video
	Edge		Vol + / Page +
	Clock		Menu
	Timer/Daily		Freeze / Timer
	No Name Left		+ / Play
	No Name Right		Volt / Focus

**Originalfernbedienung**   **Ersatzfernbedienung**