






 










 

 





















 



 





 



 




 








Originalfernbedienung Ersatzfernbedienung

	Power Receiver		Power
	DVD		Shift + 1
	BD		Shift + 2
	DVR		Shift + 3
	HDMI		Shift + 4
	TV		Shift + 5
	CD		Shift + 6
	CD-R		Shift + 7
	Video		Shift + 8
	iPod USB		Shift + 9
	Tuner		Shift + 0
	1		1
	↶ Input Select		Shift + Vol -
	2		2
	Input Select ↷		Shift + Vol +
	3		3
	4		4

 


 

 



Originalfernbedienung Ersatzfernbedienung

	Signal Sel		Shift + Guide
	5		5
	MCACC		Pre Ch
	6		6
	Sleep		Sleep
	7		7
	SBch		Guide
	8		8
	A.ATT.		Shift + Pre Ch
	9		9
	Dimmer		Shift + Mute
	0		0
	CH Level		Exit
	D.Access		List
	Class		Smart
	Enter (Class)		Shift + Smart
	Master Volume		Vol +





Originalfernbedienung Ersatzfernbedienung

	Master Volume		Vol -
	Mute		Mute
	Audio		Dual
	Band		TV/R
	Top Menu		Shift + Menu
	Video		Options
	T.Edit		D. Menu
	Up		Up
	iPod Up		Shift + Up
	Down		Down
	iPod Down		Shift + Down
	Right		Right
	Preset +		Shift + Ch +
	iPod Right		Shift + Right
	Left		Left
	Preset -		Shift + Ch -
	iPod Left		Shift + Left

Originalfernbedienung Ersatzfernbedienung

	Enter		Ok
	iPod Enter		Shift + Ok
	Home Menu		Menu
	Return		Back
	iPod CTRL		Media
	iPod Return		Shift + Back
	Auto / Alc / Direct		Red
	Standard		Yellow
	Stereo		Shift + Dual
	Repeat		Text
	Adv. Surr.		Blue
	<<		<<
	Random		Eject
	Phase CTRL		Subt
	Play		Play
	Status		AV
	>>		>>



