


 





 


 

 
 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|---------------|
|  | Power Receiver |  | Power |
|  | DVD |  | Shift + 1 |
|  | BD |  | Shift + 2 |
|  | DVR |  | Shift + 3 |
|  | HDMI |  | Shift + 4 |
|  | TV |  | Shift + 5 |
|  | CD |  | Shift + 6 |
|  | CD-R |  | Shift + 7 |
|  | Video |  | Shift + 8 |
|  | iPod USB |  | Shift + 9 |
|  | Tuner |  | Shift + 0 |
|  | ↶ Input Select |  | Shift + Vol - |
|  | Input Select ↷ |  | Shift + Vol + |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |

 
 
Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|----------------|
|  | Signal Sel |  | Shift + Guide |
|  | 5 |  | 5 |
|  | MCACC |  | Pre Ch |
|  | 6 |  | 6 |
|  | Sleep |  | Sleep |
|  | 7 |  | 7 |
|  | SBch |  | Guide |
|  | 8 |  | 8 |
|  | A.ATT. |  | Shift + Pre Ch |
|  | 9 |  | 9 |
|  | Dimmer |  | Shift + Mute |
|  | 0 |  | 0 |
|  | CH Level |  | Exit |
|  | D.Access |  | List |
|  | Class |  | Smart |
|  | Enter (Class) |  | Shift + Smart |
|  | Master Volume |  | Vol + |

 
 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|---------------|
|  | Master Volume |  | Vol - |
|  | Mute |  | Mute |
|  | Audio |  | Dual |
|  | Band |  | TV/R |
|  | Top Menu |  | Shift + Menu |
|  | Video |  | Options |
|  | T.Edit |  | D. Menu |
|  | Up |  | Up |
|  | 2nd Up |  | Shift + Up |
|  | Down |  | Down |
|  | 2nd Down |  | Shift + Down |
|  | Right |  | Right |
|  | Preset + |  | Shift + Ch + |
|  | 2nd Right |  | Shift + Right |
|  | Left |  | Left |
|  | Preset - |  | Shift + Ch - |
|  | 2nd Left |  | Shift + Left |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------------|---|--------------|
|  | Enter |  | Ok |
|  | 2nd Enter |  | Shift + Ok |
|  | Home Menu |  | Menu |
|  | iPod CTRL |  | Media |
|  | Return |  | Back |
|  | 2nd Return |  | Shift + Back |
|  | Auto / Alc / Direct |  | Red |
|  | Stereo |  | Shift + Dual |
|  | Standard |  | Yellow |
|  | Repeat |  | Text |
|  | Adv. Surr. |  | Blue |
|  | Random |  | Eject |
|  | << |  | << |
|  | Phase CTRL |  | Subt |
|  | Play |  | Play |
|  | Status |  | AV |
|  | >> |  | >> |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-----------|---|--------------|
| | I<< | | I<< |
| | MPX | | Format |
| | Pause | | Pause |
| | PQLS | | 3D |
| | Stop | | Stop |
| | >>I | | >>I |
| | 2nd Disp. | + | Shift + Info |
| | Disp | | Info |
| | CH - | | Ch - |
| | CH + | | Ch + |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

