





 

 
 
 
 





 

 
 






 



 


 


 

 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Recall		Pre Ch
	SS-Titre		Subt
	Accueil		D. Menu
	YouTube		Media

Originalfernbedienung Ersatzfernbedienung

	Netflix		Smart
	Reg. Rapide		3D
	Menu		Menu
	Retour/Guide		Guide
	Sortie		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Liste		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute





**Originalfernbedienung Ersatzfernbedienung**

	CH+		Ch +
	CH-		Ch -
	I/II Audio/Lang		Dual
	Play		Play
	Pause/Index		Pause
	Stop/Garde		Stop
	Rec/Mix		Rec
	I<<		I<<
	Texte		Text
	>>I		>>I
	Taille		Format
	<</Revele		<<
	>>/Annule		>>
	Heure/Pg Ht		List
	SS-Code/Pg Bs		Sleep

**Originalfernbedienung Ersatzfernbedienung**