
 

 
 
 
 






Originalfernbedienung Ersatzfernbedienung

 
 




 



 
 


	Power		Power
	Mute		Mute
	Play / Pause		Play
	USB / Stop		Stop
	USB / Stop		Media
	REC		Rec
	Info		Info
	Red / I<<		Red
	Red / I<<		I<<
	Green / >>I		>>I
	Green / >>I		Green
	Yellow / <<		Yellow
	Yellow / <<		<<
	Blue / >>		Blue
	Blue / >>		>>
	FAV		Pre Ch
	SAT		AV

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Subtitle		Subt
	TXT		Text
	Recall		Back
	Audio		Dual
	Page +		Ch +
	Page -		Ch -
	1		1
	2		2
	3		3
	4		4




Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide
	TV / Radio		TV/R

Originalfernbedienung Ersatzfernbedienung

