
 
 

 
 

 


 
 
 

 
 


 
 
 




Originalfernbedienung Ersatzfernbedienung




	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[≡]		Text
	←		Back
	Menu		Menu
	Exit		Exit
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol +		Vol +
	Vol -		Vol -
	EPG		Guide
	00:00		AV
	CH +		Ch +
	CH -		Ch -
	[<<]		3D
	[_]		Subt
	Lang		Dual





Originalfernbedienung		Ersatzfernbedienung	
	□ / ♪	SEARCH TV/R	TV/R
	♥	FAV PRE-CH	Pre Ch
	(i)	DISPLAY INFO	Info

Originalfernbedienung		Ersatzfernbedienung	

