



Originalfernbedienung Ersatzfernbedienung

POWER	Power	Power	Power
AUTO	Auto	Auto	Auto
RATIO	Ratio	Invert 3D	3D / Invert
INPUT	Input	Source	Source
EXIT	Exit	Page Vol	Vol + / Page +
MENU	Menu	Menu	Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
OK	OK	Enter	Enter
*	*	Focus Volt	Volt / Focus
(I)	(I)	Aspect Eco	Eco / Aspect
MODE	Mode	Mode	Mode
A.IRIS	A.Iris	Play +	+ / Play
KEYSTONE	Keystone	Shift + Up	Shift + Up
STILL	Still	Stop -	- / Stop

Originalfernbedienung Ersatzfernbedienung

BLANK	Blank	Mute Blank	Blank / Mute
PATTERN	Pattern	Video Comp	Comp / Video
C.TEMP	C.Temp	Page Vol	Vol - / Page -
SLEEP	Sleep	Timer Freeze	Freeze / Timer
GAMMA	Gamma	Info Help	Help / Info

