 



 
 
 
 
 

 
 
 
 
 

 
 


 
 


 
 
 
 

 









Originalfernbedienung Ersatzfernbedienung









	Power		Power
	Library		Smart
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Rec		Rec
	Last		Pre Ch
	I<		I<<
	<<		<<

Originalfernbedienung Ersatzfernbedienung

	Play		Play
	Stop		Stop
	Pause		Pause
	>>		>>
	>		>>
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol +		Vol +
	Vol -		Vol -
	Guide		Guide
	Menu		Menu
	Prog +		Ch +
	Prog -		Ch -
	Back		Back





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Info	 Info		
 Text	 Text		
 Exit	 Exit		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 AD	 Shift + Subt		
 Subt	 Subt		
 Audio	 Dual		
 A/V	 AV		
 HDMI	 Media		
 Wide	 Format		

