


 


 
 
 
 
 

 








 





 

 
 




 
 
 
 






**Originalfernbedienung Ersatzfernbedienung**

	Power On/Off		Power
	Display		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	.		Guide
	CH Enter		Pre Ch
	P/CH+		Ch +
	P/CH-		Ch -
	Muting		Mute




**Originalfernbedienung Ersatzfernbedienung**

	I-II MTS		Dual
	Vol+		Vol +
	Vol-		Vol -
	Integrator		Smart
	Home		Menu
	Exit		Exit
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter/Set		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	PC		Media





Originalfernbedienung Ersatzfernbedienung




 


 






 













 

 



 
	Input		AV
	Ext Input	 + 	Shift + AV
	TV		TV/R
	Split	 + 	Shift + 3D
	Sub Input		Subt
	Swap		Sleep
	(PIP) Shift		3D
	Drive Off	 + 	Shift + Options
	Factory		D. Menu
	2nd Factory		Text
	Set Up/Auto		Options
	ID No. SET -	 + 	Shift + TV/R
	Clear +	 + 	Shift + Exit
	Power Control	 + 	Shift + Power
	AV Selection		List
	Power Off	 + 	Shift + Media
	Power On	 + 	Shift + Smart

Originalfernbedienung Ersatzfernbedienung


 
 


 
	Zoom/Point		Eject
	Zoom-	 + 	Shift + Ch -
	Zoom+	 + 	Shift + Ch +
	Freeze		Pause
	Size/Screen		Format
	Input 1	 + 	Shift + 1
	Input 2	 + 	Shift + 2
	Input 3	 + 	Shift + 3
	Input 4	 + 	Shift + 4
	Input 5	 + 	Shift + 5
	Input 6	 + 	Shift + 6
	Input 7	 + 	Shift + 7
	Input 8	 + 	Shift + 8




**Originalfernbedienung Ersatzfernbedienung**

	Power On/Off		Power
	Display		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	CH Enter		Pre Ch
	.		Guide
	P/CH+		Ch +
	P/CH-		Ch -
	Muting		Mute


 


**Originalfernbedienung Ersatzfernbedienung**

	I-II MTS		Dual
	Vol+		Vol +
	Vol-		Vol -
	Integrator		Smart
	Home		Menu
	Exit		Exit
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter/Set		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	PC		Media





**Originalfernbedienung Ersatzfernbedienung**

	Input		AV
	Ext Input		Shift + AV
	TV		TV/R
	Split		Shift + 3D
	Sub Input		Subt
	Swap		Sleep
	(PIP) Shift		3D
	Drive Off		Shift + Options
	Factory		D. Menu
	2nd Factory		Text
	Set Up/Auto		Options
	ID No.Set -		Shift + TV/R
	Clear +		Shift + Exit
	Control Power		Shift + Power
	AV Selection		List
	Power Off		Shift + Media
	Power On		Shift + Smart

**Originalfernbedienung Ersatzfernbedienung**

	Zoom-		Shift + Ch -
	Zoom/Point		Eject
	Zoom+		Shift + Ch +
	Freeze		Pause
	Size/Screen		Format
	Input 1		Shift + 1
	Input 2		Shift + 2
	Input 3		Shift + 3
	Input 4		Shift + 4
	Input 5		Shift + 5
	Input 6		Shift + 6
	Input 7		Shift + 7
	Input 8		Shift + 8

