

 
 




 
 
 






 

 

 

 




 
 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Zoom		Shift + Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Video Sel		Smart
	Step		Guide
	I.Replay		Options
	I.Skip		TV/R

Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	l<<		l<<
	Stop		Stop
	Play		Play
	Pause		Pause
	>>l		>>l
	Menu		Menu
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Disc Menu		D. Menu
	EZ View		3D
	Info		Info





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Cancel	 Exit		
 Subtitle	 Subt		
 Audio	 Dual		
 Repeat	 Text		
 HDMI Sel	 AV		

