


 



 



 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Mute		Mute
	Mode		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Nicam/A2		Dual
	TXT / Mix		Text
	TV / Radio		TV/R

Originalfernbedienung Ersatzfernbedienung

	List		List
	Back		Back
	Menu		Menu
	CH +		Ch +
	CH -		Ch -
	Vol +		Vol +
	Vol -		Vol -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	FAV		Pre Ch
	EPG		Guide
	Info		Info
	Exit		Exit
	Red		Red



