


**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Pre Ch
	Menu		Menu
	Source		AV
	Exit		Exit

**Originalfernbedienung    Ersatzfernbedienung**

	Display		Info
	Sleep		Sleep
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	FAV/List		Shift + Pre Ch
	Clock		Shift + AV
	List		List
	Tv/Radio		TV/R
	Aspect		Format
	Freeze		Pause
	Index		Options
	Cancel		Back
	Subpage		Subt
	Text		Text
	Size		Eject





Originalfernbedienung Ersatzfernbedienung

	Reveal		Media
	Hold		Dual
	Mix		Shift + Media
	Red		Red
	Green		Green
	Yellow		Yellow
	Cyan		Blue
	Nicam		Smart
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left

Originalfernbedienung Ersatzfernbedienung


