



 

 



 

 





 



 

 

 





 



 

 

 

 

 
 
 





 

 
 

 
 

 
 




 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Aspect		Shift + Picture / Format
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Audio / Nicam		Audio / Lang I/II
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

 

 

 

 

 

 

 
 
 

 
 

 





 

 



 

Originalfernbedienung Ersatzfernbedienung

	-/-		Shift + Guide / EPG / -/-
	Recall		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Source		AV / Input / RDS
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Vol +		Vol+
	Exit		Exit / Cancel / Clear
	CH +		CH+ / Page+
	Vol -		Vol-

 

 
 
 

 

 

 




Originalfernbedienung Ersatzfernbedienung

	Display		Display / Media
	CH -		CH- / Page-
	TXT		Text / Goto
	Index		Setup / OPT /
	Hold		Shift + Stop /
	Mix		Shift + Text /
	Subpage		Eject / Surround
	Reveal / Subtitle		Subtitle / EQ
	Size		Zoom / Size
	Rec / Goto /		Rec / Rec Mode
	EPG		Guide / EPG / -/--
	List		Smart / List
	TV / Radio		TV/Radio /
	FAV		Fav / Marker / PC
	Play / Pause		Play / Slow
	Play / Pause		Shift + Play /
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

	PVR Menu		D.Menu / Top
	Media		Shift + Display / Media
	L<<		L<< / Preset-
	>>L		>>L / Preset+
	<<		<< / Tune-
	>>		>> / Tune+

