



 







 

 

 



 


 


 
 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info
	Search		TV/R
	Sources		AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	←		Pre Ch
	Home		Smart
	≡		Dual
	<<		<<
	Play		Play
	>>		>>
	Stop		Stop
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Netflix		Shift + Media
	Windows		Media
	Rakuten Tv		Shift + Smart
	CH+		Ch +
	CH-		Ch -
	Exit/TV		Exit
	1		1
	2		2
	3		3





**Originalfernbedienung    Ersatzfernbedienung**

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	List/Tv Guide		Guide

**Originalfernbedienung    Ersatzfernbedienung**