



 

 
 











 



 
 


 





 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Display		Info
	Exit		Exit
	TV / AV		AV
	SYS		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide

Originalfernbedienung Ersatzfernbedienung

	Recall		Pre Ch
	V +		Vol +
	V -		Vol -
	P +		Ch +
	P -		Ch -
	Up		Up
	Left		Left
	Menu		Menu
	Menu		Ok
	Right		Right
	Down		Down
	SMode		Format
	PMode		Shift + Dual
	Sleep		Sleep
	Nicam		Dual
	Hold		Stop
	Index		Media





Originalfernbedienung Ersatzfernbedienung

PGUP	PGUP	SHIFT + + CH	Shift + Ch +
SIZE	Size	ZOOM ↑	Eject
PGDN	PGDN	SHIFT + - CH	Shift + Ch -
TEXT	Text	REPEAT TEXT	Text
REVEAL	Reveal	SETTINGS OPT	Options
SUBPAGE	Subpage	AD SUBT	Subt
RED	Red	A	Red
GREEN	Green	B	Green
YELLOW	Yellow	C	Yellow
BLUE	Blue	D	Blue

Originalfernbedienung Ersatzfernbedienung

