



Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	STB		Shift + 3
	DVD		Shift + 2
	AUX		Shift + 7
	TV		Shift + 1
	Vol Mode		Smart / List
	Auto Setup		Setup / OPT /
	Input Mode		AV / Input / RDS
	Sleep		Sleep / Timer
	1 / 5BEAM		1
	2 / ST + 3BEAM		2
	3 / 3BEAM		3
	4 / Stereo		4
	5 / My Beam		5
	6 / Surround		Eject / Surround
	6 / Surround		6
	7 / Music		7

Originalfernbedienung Ersatzfernbedienung

	8 / Movie		8
	9 / Sports		9
	0 / Off		0
	+10		Guide / EPG / -/--
	(•)		Audio / Lang I/II
	CH Level		Display / Media
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Test		Text / Goto
	Down		Down
	Return		Back / Return
	Volume +		Vol+
	Volume -		Vol-
	Mute		Mute / Dimmer





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input 1		Smart / List
	Input 2		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	CH+		CH+ / Page+
	Tv Vol+		Vol+
	CH-		CH- / Page-
	Tv Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	Tv Input		AV / Input / RDS
	Tv Mute		Mute / Dimmer
	Power AUX		Shift + Power
	1 AUX		Shift + 1
	2 AUX		Shift + 2
	3 AUX		Shift + 3
	4 AUX		Shift + 4
	5 AUX		Shift + 5
	6 AUX		Shift + 6
	7 AUX		Shift + 7
	8 AUX		Shift + 8
	9 AUX		Shift + 9
	0 AUX		Shift + 0



