



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	TV/HDTV		Red
	Movie		Green
	Music		Yellow
	Photo		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/Timeshift		0
	[ ]/16:9/4:3		Format

**Originalfernbedienung Ersatzfernbedienung**

	Zoom		Eject
	I<<		I<<
	>>I		>>I
	Stop		Stop
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	>>/Sort		>>
	<</Jum		<<
	Play		Play
	Pause		Pause
	Vol+		Vol +
	Vol-		Vol -
	CH Tv/Folder+		Ch +
	CH Tv/Folder-		Ch -



