



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------------------|---|-------|
|  | On/Standby |  | Power |
|  | Display |  | Info |
|  | Enter Receiver |  | Ok |
|  | Up Receiver |  | Up |
|  | Down Receiver |  | Down |
|  | Right Receiver |  | Right |
|  | Left Receiver |  | Left |
|  | Return Receiver |  | Back |
|  | Setup Receiver |  | Smart |
|  | Home/Audio |  | Media |
|  | Play Receiver |  | Play |
|  | I<< Receiver |  | I<< |
|  | >>I Receiver |  | >>I |
|  | << Receiver |  | << |
|  | >> Receiver |  | >> |
|  | Pause/Play reverse Receiver |  | Pause |
|  | Stop Receiver |  | Stop |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------------------------|---|---------------|
|  | 1 Receiver |  | 1 |
|  | 2 Receiver |  | 2 |
|  | 3 Receiver |  | 3 |
|  | 4 Receiver |  | 4 |
|  | 5 Receiver |  | 5 |
|  | 6 Receiver |  | 6 |
|  | 7 Receiver |  | 7 |
|  | 8 Receiver |  | 8 |
|  | 9 Receiver |  | 9 |
|  | 0/11 Receiver |  | 0 |
|  | +10/--/---10/Dimmer/D.Tun Receiver |  | Shift + Guide |
|  | CLR/Sleep/12 Receiver |  | Pre Ch |
|  | Movie Tv/Search Receiver |  | Red |
|  | Music/Repeat Receiver |  | Green |
|  | Game/Random Receiver |  | Yellow |
|  | THX / Play Mode Receiver |  | Blue |
|  | Muting Receiver |  | Mute |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------------|---|---------------|
|  | Vol+ Receiver |  | Vol + |
|  | Vol- Receiver |  | Vol - |
|  | CH/Disc/Album+ Receiver |  | Ch + |
|  | CH/Disc/Album- Receiver |  | Ch - |
|  | Power Tv |  | Shift + Power |
|  | Input Tv |  | AV |
|  | CH+ Tv |  | Shift + Ch + |
|  | CH- Tv |  | Shift + Ch - |
|  | Up Tv |  | Shift + Up |
|  | Enter Tv |  | Shift + Ok |
|  | Down Tv |  | Shift + Down |
|  | Right Tv |  | Shift + Right |
|  | Left Tv |  | Shift + Left |
|  | Menu/Prev CH |  | Menu |
|  | Guide/Top Menu |  | Shift + Menu |
|  | Return Tv |  | Shift + Back |
|  | Setup Tv |  | Shift + Smart |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|----------------|
|  | Movie/TV/Search |  | Options |
|  | Music/Repeat |  | Dual |
|  | Game/Random |  | Subt |
|  | Stereo/Play Mode |  | TV/R |
|  | 1 Tv |  | Shift + 1 |
|  | 2 Tv |  | Shift + 2 |
|  | 3 Tv |  | Shift + 3 |
|  | 4 Tv |  | Shift + 4 |
|  | 5 Tv |  | Shift + 5 |
|  | 6 Tv |  | Shift + 6 |
|  | 7 Tv |  | Shift + 7 |
|  | 8 Tv |  | Shift + 8 |
|  | 9 Tv |  | Shift + 9 |
|  | 0/11 Tv |  | Shift + 0 |
|  | +10/--10 Tv |  | Guide |
|  | CLR/Sleep/12 |  | Shift + Pre Ch |
|  | Vol+ Tv |  | Shift + Dual |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-----------------|
|  | Vol- Tv |  | Shift + Options |
|  | AUX |  | Text |
|  | TV / CD |  | Format |
|  | CBL/SAT |  | 3D |
|  | PORT |  | Shift + Media |
|  | TUNER |  | Shift + Subt |
|  | DVD / BD |  | Shift + Text |
|  | Game |  | Shift + TV/R |
|  | VCR / DVR |  | Shift + AV |
|  | PC |  | Shift + Format |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

 









 





 
 
 

 

 

 


 
 


 


Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------------|---|---------|
|  | Power BD/DVD |  | Power |
|  | Menu/Prev CH |  | Menu |
|  | Top Menu/Guide BD/DVD |  | Options |
|  | Setup BD/DVD |  | Smart |
|  | Return BD/DVD |  | Back |
|  | Audio BD/DVD |  | Media |
|  | Enter BD/DVD |  | Ok |
|  | Up BD/DVD |  | Up |
|  | Down BD/DVD |  | Down |
|  | Right BD/DVD |  | Right |
|  | Left BD/DVD |  | Left |
|  | I<< BD/DVD |  | I<< |
|  | >>I BD/DVD |  | >>I |
|  | << BD/DVD |  | << |
|  | >> BD/DVD |  | >> |
|  | Play BD/DVD |  | Play |
|  | Pause/Play rev. BD/DVD |  | Pause |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------------------|---|--------|
|  | Stop BD/DVD |  | Stop |
|  | Movie Tv/Search BD/DVD |  | Red |
|  | Music/Repeat |  | Green |
|  | Game/Random |  | Yellow |
|  | Stereo/Play Mode BD/DVD |  | Blue |
|  | 1 BD/DVD |  | 1 |
|  | 2 BD/DVD |  | 2 |
|  | 3 BD/DVD |  | 3 |
|  | 4 BD/DVD |  | 4 |
|  | 5 BD/DVD |  | 5 |
|  | 6 BD/DVD |  | 6 |
|  | 7 BD/DVD |  | 7 |
|  | 8 BD/DVD |  | 8 |
|  | 9 BD/DVD |  | 9 |
|  | 0/11 BD/DVD |  | 0 |
|  | +10/-/-10/D.Tun/Dimmer BD/DVD |  | Guide |
|  | CLR/Sleep/12 |  | Pre Ch |







 

 


 

 















 
 

 


BD/DVD



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------------|---|-----------------|
|  | CBL/SAT |  | Text |
|  | Muting Receiver |  | Mute |
|  | Vol+ Receiver |  | Vol + |
|  | Vol- Receiver |  | Vol - |
|  | Power CBL/SAT |  | Shift + Power |
|  | CH Disc/Album+ CBL/SAT |  | Ch + |
|  | CH Disc/Album- CBL/SAT |  | Ch - |
|  | Menu/Prev CH CBL/SAT |  | Shift + Menu |
|  | Top Menu/Guide CBL/SAT |  | Shift + Options |
|  | Return CBL/SAT |  | Shift + Back |
|  | Setup CBL/SAT |  | Shift + Smart |
|  | Up CBL/SAT |  | Shift + Up |
|  | Enter CBL/SAT |  | Shift + Ok |
|  | Down CBL/SAT |  | Shift + Down |
|  | Right CBL/SAT |  | Shift + Right |
|  | Left CBL/SAT |  | Shift + Left |
|  | Pause/Play rev. CBL/SAT |  | Shift + Pause |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------------------|---|--------------|
|  | Stop CBL/SAT |  | Shift + Stop |
|  | << CBL/SAT |  | Shift + Ch - |
|  | >> CBL/SAT |  | Shift + Ch + |
|  | Play CBL/SAT |  | 3D |
|  | Movie Tv/Search CBL/SAT |  | Dual |
|  | Music/Repeat CBL/SAT |  | Subt |
|  | Game/Random |  | AV |
|  | Stereo/Play Mode CBL/SAT |  | Format |
|  | 1 CBL/SAT |  | Shift + 1 |
|  | 2 CBL/SAT |  | Shift + 2 |
|  | 3 CBL/SAT |  | Shift + 3 |
|  | 4 CBL/SAT |  | Shift + 4 |
|  | 5 CBL/SAT |  | Shift + 5 |
|  | 6 CBL/SAT |  | Shift + 6 |
|  | 7 CBL/SAT |  | Shift + 7 |
|  | 8 CBL/SAT |  | Shift + 8 |
|  | 9 CBL/SAT |  | Shift + 9 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------------|---|-----------|
| | 0/11 CBL/SAT | + | Shift + 0 |
| | DVD/BD | | TV/R |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

 







 

 
 
 

 

 

 














Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|-------|
|  | Power CD |  | Power |
|  | CH/Disc+ CD |  | Ch + |
|  | CH/Disc- CD |  | Ch - |
|  | Return CD |  | Back |
|  | Setup CD |  | Smart |
|  | Audio CD |  | Media |
|  | Up CD |  | Up |
|  | Down CD |  | Down |
|  | Right CD |  | Right |
|  | Left CD |  | Left |
|  | Enter CD |  | Ok |
|  | I<< CD |  | I<< |
|  | >>I CD |  | >>I |
|  | << CD |  | << |
|  | >> CD |  | >> |
|  | Play CD |  | Play |
|  | Pause CD |  | Pause |

Originalfernbedienung Ersatzfernbedienung

 
 





 
| | | | |
|---|-----------------------------|---|--------|
|  | Stop CD |  | Stop |
|  | Movie Tv/Search |  | Red |
|  | Music/Repeat |  | Green |
|  | Game/Random |  | Yellow |
|  | Stereo/Play Mode |  | Blue |
|  | 1 CD |  | 1 |
|  | 2 CD |  | 2 |
|  | 3 CD |  | 3 |
|  | 4 CD |  | 4 |
|  | 5 CD |  | 5 |
|  | 6 CD |  | 6 |
|  | 7 CD |  | 7 |
|  | 8 CD |  | 8 |
|  | 9 CD |  | 9 |
|  | 0/11 CD |  | 0 |
|  | +10/-10/D.Tun/ Dimmer CD |  | Guide |
|  | CLR/Sleep/12 |  | Pre Ch |



CD



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|-------|
|  | Muting Receiver |  | Mute |
|  | Vol+ Receiver |  | Vol + |
|  | Vol- Receiver |  | Vol - |
|  | TV/CD |  | TV/R |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

 


 






 







 
 
 

 


 

 




 

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------------|---|-------|
|  | Power Receiver Zone 2 |  | Power |
|  | Muting Receiver |  | Mute |
|  | Vol+ Zone 2 |  | Vol + |
|  | Vol- Zone 2 |  | Vol - |
|  | CH Disc/Album+ Zone 2 |  | Ch + |
|  | CH Disc/Album- Zone 2 |  | Ch - |
|  | Up Zone 2 |  | Up |
|  | Enter Zone 2 |  | Ok |
|  | Down Zone 2 |  | Down |
|  | Right Zone 2 |  | Right |
|  | Left Zone 2 |  | Left |
|  | Return Zone 2 |  | Back |
|  | Setup Zone 2 |  | Smart |
|  | Audio Zone 2 |  | Media |
|  | I<< Zone 2 |  | I<< |
|  | >>I Zone 2 |  | >>I |
|  | Play Zone 2 |  | Play |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------------|---|--------|
|  | >> Zone 2 |  | >> |
|  | << Zone 2 |  | << |
|  | Pause Zone 2 |  | Pause |
|  | Stop Zone 2 |  | Stop |
|  | Movie Tv/Search Zone 2 |  | Red |
|  | Music/Repeat |  | Green |
|  | Game/Random |  | Yellow |
|  | Stereo/Play Mode Zone 2 |  | Blue |
|  | 1 Zone 2 |  | 1 |
|  | 2 Zone 2 |  | 2 |
|  | 3 Zone 2 |  | 3 |
|  | 4 Zone 2 |  | 4 |
|  | 5 Zone 2 |  | 5 |
|  | 6 Zone 2 |  | 6 |
|  | 7 Zone 2 |  | 7 |
|  | 8 Zone 2 |  | 8 |
|  | 9 Zone 2 |  | 9 |



