



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	HDMI1	 Vol	Vol + / Page +
	HDMI2		- / Stop
	Component		Comp / Video
	PC		3D / Invert
	S-Video	 Vol	Vol - / Page -
	Default	+	Shift + Power
	Video	+	Shift + Comp / Video
	Menu		Menu
	Esc		Mode
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter/Line Menu		Enter
	Memory		Source
	Aspect		Eco / Aspect

Originalfernbedienung Ersatzfernbedienung

	RGBCMY		Volt / Focus
	Gamma		Auto
	Color Mode		Help / Info
	Sharpness		+ / Play
	Pattern		Freeze / Timer
	Blank		Blank / Mute

