

 
 
 
 
 





 



 

 
 
 

 








 

 

 

 
 





 







 






 



 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	P.Mode		Format
	S.Mode		List
	PIP Swap		3D
	Still		Pause
	Mute		Mute
	TV		TV/R
	AV		AV
	Multimedia		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	Prev. PR		Pre Ch
	Audio / I/II		Dual
	PR +		Ch +
	PR -		Ch -
	Vol +		Vol +
	Vol -		Vol -
	Up		Up
	Left		Left
	OK		Ok
	Menu		Menu
	Right		Right
	Down		Down
	S.Effect		Shift + Dual
	i / Recall		Back
	Edit		Info



