



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	AUX		Red
	TAPE 1/2		Green
	CD		Yellow
	TUNER		Blue
	INC SURR.		Smart
	DBB		Guide
	DSC		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	>		>>
	<		<<
	>>		>>
	<<		<<
	Program		Sleep

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	AUX		Red
	Tape 1/2		Green
	CD		Yellow
	Tuner		Blue
	INC SURR.		Smart
	1 CD Direct		1
	2 CD Direct		2
	3 CD Direct		3
	DBB		Guide
	DSC		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Pause		Pause
	Play		Play
	>		>>

Originalfernbedienung Ersatzfernbedienung

	<		<<
	Stop		Stop
	>>		>>>
	<<		<<<
	Repeat		Text
	Shuffle		Media
	Program		Sleep







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	AUX		Red
	TAPE 1/2		Green
	CD		Yellow
	Tuner		Blue
	INC SURR.		Smart
	DBB		Guide
	DSC		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Pause		Pause
	Play		Play
	>		>>
	<		<<
	Stop		Stop
	>>		>>

Originalfernbedienung Ersatzfernbedienung

	<<		<<





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	AUX		Red
	TAPE 1/2		Green
	CD		Yellow
	Tuner		Blue
	INC SURR.		Smart
	DBB		Guide
	DSC		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

