 
 
 
 
 




 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Red/Title		Red
	Green/Goto		Green
	Yellow/Repeat		Yellow
	Blue/A-B		Blue
	<</Index		<<
	>>/Hold		>>
	I<</Size		I<<
	>>I/Subpage		>>I
	Play		Play
	Pause		Pause
	Stop		Stop
	USB		Smart
	Subtitle		Subt
	TV/TXT		Text
	Cancel		Media

Originalfernbedienung Ersatzfernbedienung

	Reveal		Options
	Nicam/A2		Dual
	Tv/Radio		TV/R
	FAV		Pre Ch
	Nothing		3D
	Sleep		Sleep
	Disp		Info
	Input		AV
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -





Originalfernbedienung Ersatzfernbedienung

EPG	EPG	GUIDE	Guide
CH. L	CH.L	DISC NAV LIST	List
▲ CH	CH+	+ CH	Ch +
▼ CH	CH-	CH -	Ch -
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
-/--	-/--	SHIFT + -/--	Shift + Guide
PICTURE	Picture	SHIFT + PICTURE	Shift + Format
ASPECT	Aspect	PICTURE FORMAT	Format

Originalfernbedienung Ersatzfernbedienung

↺	Recall	RETURN BACK	Back
SOUND	Sound	SHIFT + SOUND	Shift + Dual

