

























































 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Radio		TV/Radio /
	Search		Display / Media
	Subtitle		Subtitle / EQ
	*		D.Menu / Top
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0

Originalfernbedienung Ersatzfernbedienung

	...		Fav / Marker / PC
	Vol+		Vol+
	AD		Audio / Lang I/II
	CH+		CH+ / Page+
	Vol-		Vol-
	Guide		Guide / EPG / -/-
	CH-		CH- / Page-
	Mute		Mute / Dimmer
	Netflix		Shift + Red / Netflix /
	Home		Menu / Home
	Prime Video		Shift + Blue / Prime
	Back		Back / Return
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right



