

























































 











**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Tv/Radio		TV/Radio /
	Search		Display / Media
	Subtitle		Subtitle / EQ
	*		D.Menu / Top
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0

**Originalfernbedienung    Ersatzfernbedienung**

	...		Fav / Marker / PC
	Vol+		Vol+
	AD		Audio / Lang I/II
	CH+		CH+ / Page+
	Vol-		Vol-
	Guide		Guide / EPG / -/-
	CH-		CH- / Page-
	Mute		Mute / Dimmer
	Netflix		Shift + Red / Netflix /
	Home		Menu / Home
	Prime Video		Shift + Blue / Prime
	Back		Back / Return
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right





**Originalfernbedienung    Ersatzfernbedienung**

Originalfernbedienung	Ersatzfernbedienung
TEXT	GOTO TEXT / Text / Goto
	Down
T.OPT	OPT-TOOLS SETUP / Setup / OPT /
MOVIES	FORMAT PICTURE / Picture / Format
REC	REC MODE / Rec / Rec Mode
	HOLD / Stop / Hold
	TUNE- / << / Tune-
	SLOW / Play / Slow
	STEP - FREEZE / Pause / Step / Freeze
	TUNE+ / >> / Tune+
	NETFLIX SEARCH / Red / Netflix / Search
	APP REPEAT / Green / APP / Repeat
	YouTube REPEAT A-B / Yellow / YouTube / Repeat
	Prime Video RANDOM / Blue / Prime Video / Random

**Originalfernbedienung    Ersatzfernbedienung**

Originalfernbedienung	Ersatzfernbedienung

