





 
 
 
 
 
 
 

 



 
 




 






 
 
 






 

 

 
 
 



 



 
Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Mute		Mute	
Update		List	
Reveal		Dual	
Txt Stop		Stop	
Info		Info	
Subt.List		Subt	
Sleep Timer		Sleep	
Return TV		TV/R	
Menu video		Options	
Text		Text	
Txt Expand		Eject	
TV/AV		AV	
Menu		Menu	
Menu Up		Up	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Display		Shift + Info	
Menu Off		Exit	
Menu Down		Down	
Back		Back	
Volume+		Vol +	
Chan.Up		Ch +	
Volume-		Vol -	
Chan.Down		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	



Originalfernbedienung Ersatzfernbedienung

9		9
Guide -/-- 1.		Guide
0/10		0
Disp	 + 	Shift + AV
Aft/Caf	 + 	Shift + 3D
2.Fav P/C 2.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Rotate Text		D. Menu
Mix Scan		Smart
Store Text	 + 	Shift + Text
Bright+ Mode		3D
Browse		Media
Blue		Blue
Tone-	 + 	Shift + Vol -
Contrast+	 + 	Shift + Ch +

Originalfernbedienung Ersatzfernbedienung

Tune-		<<
Tune+		>>
Contrast-	 + 	Shift + Ch -
Surround	 + 	Shift + Red
4.# 16:9		Format
Nicam/Mono	 + 	Shift + Green
Color+ P.Std	 + 	Shift + Format
Level L	 + 	Shift + Yellow
Level R/Woofer	 + 	Shift + Blue
Audio+		>>
Tone+	 + 	Shift + Vol +
Audio-		<<

