


 

 
 
 
 
 
 
 

 



 
 
 
 
 
 
 
 

 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv		TV/R
	P.Mode		Format
	S.Mode		Dual
	Sleep		Sleep
	Aspect		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide

Originalfernbedienung Ersatzfernbedienung

	Recall		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Source		AV
	Ch+		Ch +
	Ch-		Ch -
	MTS		Media
	C.C		Text
	Info/Display		Info
	Menu		Menu
	Return		Back
	Ch.List		List
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right



