





 

 



 



 




 

 



 








Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-------|
|  | Power |  | Power |
|  | Eject |  | Eject |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Clear |  | Exit |
|  | Time/text |  | Text |
|  | Input |  | AV |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------------|
|  | Picture Mode |  | Format |
|  | O))) |  | Dual |
|  | [...] |  | Subt |
|  | Camera |  | Smart |
|  | Sur |  | Options |
|  | Picture Navi |  | 3D |
|  | Repeat |  | Shift + Text |
|  | >> |  | >> |
|  | << |  | << |
|  | >> / > |  | >> |
|  | < / << |  | << |
|  | -> > |  | Ch + |
|  | < /<- |  | Ch - |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | Stop |  | Stop |
|  | Up |  | Up |



