

 
 
 
 


 

 
 
 
 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	i		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Favorite		Shift + Pre Ch
	Last View		Pre Ch
	Audio		Dual
	Off Timer		Shift + Power
	Aspect		Format

Originalfernbedienung Ersatzfernbedienung

	Guide		Guide
	Vol +		Vol +
	Vol -		Vol -
	Input TV		TV/R
	Input AV		AV
	CH +		Ch +
	CH -		Ch -
	Mute		Mute
	Text		Text
	STTL		Subt
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu



**Originalfernbedienung    Ersatzfernbedienung**

	Back / Return		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<
	Play / Pause		Play
	Play / Pause		Pause
	>>		>>
	Stop		Stop

**Originalfernbedienung    Ersatzfernbedienung**