



 
 




 
 










 




 


 

 

 
 














Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Mosaico		List
	DVR / Gravações		Media
	VOD / Videoclube		Smart
	Pesquisa		Shift + TV/R
	Exit		Exit
	Menu		Menu
	i		Info
	Vol +		Vol +
	Vol -		Vol -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	P +		Ch +

Originalfernbedienung Ersatzfernbedienung

	P -		Ch -
	Stop		Stop
	<<		<<
	Pause		Pause
	Play		Play
	>>		>>
	Rec		Rec
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	I<<		I<<
	Back		Back
	Radio / TXT		TV/R
	Radio / TXT		Text
	>>I		>>I
	1		1





Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	GUIA /		Guide
	* / AV		AV
	# / -/--	 + 	Shift + Guide

Originalfernbedienung Ersatzfernbedienung

