 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return
	Sleep		Sleep / Timer
	Audio		Audio / Lang I/II
	Aspect		Zoom / Size

Originalfernbedienung Ersatzfernbedienung

	Input		AV / Input / RDS
	Info		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	FAV		Fav / Marker / PC
	CH+		CH+ / Page+
	Vol-		Vol-
	P.Mode		Picture / Format
	CH-		CH- / Page-
	S.Mode		Sound / Title
	Red		Red / Netflix / Search






 




Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Home		Shift + Menu /
	Setup		Setup / OPT /
	Mouse		Display / Media
	EPG		Guide / EPG / -/--
	Text		Text / Goto
	Stop/Reveal		Stop / Hold
	Play		Play / Slow
	Pause/Mix/T		Pause / Step / Freeze
	Index		Smart / List
	<</Hold		<< / Tune-
	>>/Subpage		>> / Tune+
	I<</Size		I<< / Preset-
	>>I/Cancel		>>I / Preset+
	Sub-T		Subtitle / EQ

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	Netflix		Shift + Red / Netflix /
	You Tube		Shift + Yellow / YouTube /

