















 


 

 















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Clock		Shift + Sleep / Timer
	Sleep		Sleep / Timer
	CD		Shift + 3
	Analog In		D.Menu / Top
	Optical In		Setup / OPT /
	FM		Smart / List
	AM		Display / Media
	Bluetooth		Shift + 9
	I<<		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	<</Tune-		<< / Tune-
	Stop		Stop / Hold
	>>/Tune+		>> / Tune+
	Preset+		Shift + >>I / Preset+

Originalfernbedienung Ersatzfernbedienung

	Tone		AV / Input / RDS
	Volume+		Vol+
	Preset-		Shift + I<< / Preset-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Dimmer		Shift + Mute / Dimmer
	Info		Info / Angle
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Timer Menu		Menu / Home
	Shuffle		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	Program		TV/Radio /





Originalfernbedienung Ersatzfernbedienung

MODE	Mode	FORMAT PICTURE	Picture / Format
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
+10	+10	GUIDE EPG	Guide / EPG / -/--
0	0	HDMI - BAT	0
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

