




Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	Input Select		AV / Input / RDS
	HDMI		Shift + 0
	Eject		Eject / Surround
	1		1
	2		2
	3		3
	Prog +		CH+ / Page+
	4		4
	5		5
	6		6
	Prog -		CH- / Page-
	7		7
	8		8
	9		9
	Time Shift		Zoom / Size
	Sat Link		TV/Radio /

Originalfernbedienung Ersatzfernbedienung

	0		0
	Clear		Exit / Cancel / Clear
	[i+]		Info / Angle
	Text		Text / Goto
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Guide		Guide / EPG / -/-
	Top Menu		D.Menu / Top
	Up		Up
	Menu / List		Menu / Home
	Left		Left
	Enter / OK		OK
	Right		Right
	Display		Display / Media
	Down		Down
	Return / Back		Back / Return
	Red		Red / Netflix / Search

 



 

 





Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	Yellow / System		Yellow / YouTube / Repeat
	Blue / Search		Shift + Blue / Prime Video / Prime
	Blue / Search		Blue / Prime Video / Random
	<< REV		<< / Tune-
	Play		Play / Slow
	>> FWD		>> / Tune+
	I<< Skip		I<< / Preset-
	Stop		Stop / Hold
	Skip >>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	VCR		Shift + 4
	DVD		Shift + 2
	CM Skip		Sound / Title
	Dubbing		Picture / Format
	Rec		Rec / Rec Mode
	Rec Speed		Shift + Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

	Setup		Setup / OPT /
	Timer Set		Sleep / Timer
	Timer Prog		Shift + Sleep / Timer
	1.3x / 0.8x Play		Smart / List

