



























 









Originalfernbedienung    Ersatzfernbedienung

	Vol +		Vol+
	P+		CH+ / Page+
	Vol -		Vol-
	Power		Power
	P-		CH- / Page-
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	PP		Back / Return
	PP		Fav / Marker / PC

Originalfernbedienung    Ersatzfernbedienung

	0		0
	Display [ + ]		Display / Media
	[≡]		Text / Goto
	□		Stop / Hold
	?		Smart / List
	↕		Zoom / Size
	- / ψ		I<< / Preset-
	- / ψ		Left
	Menu		Menu / Home
	Menu		OK
	+ / >>I		>>I / Preset+
	+ / >>I		Right
	◇◇ / I-II		Audio / Lang I/II
	◇◇ / I-II		Setup / OPT /

