 



 

 

 
 

 
 
 
 

 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Source		Source
	Zoom		Eco / Aspect
	Hide		Auto
	Ratio		Shift + Mode
	Freeze		Freeze / Timer
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu
	Mode		Mode
	3D		3D / Invert
	Media Home		Shift + Menu
	Media Setup		Shift + Power
	1 / << /  <		Vol + / Page +
	2 / >   / Enter		Enter

**Originalfernbedienung    Ersatzfernbedienung**

	3 / >> / >		+ / Play
	4 / VGA		Volt / Focus
	5 / Stop / Back		Vol - / Page -
	6 / Video		Comp / Video
	7 / SD / USB A		Shift + Comp / Video
	8 / HDMI / DVI		- / Stop
	9 / Lan Wifi		Help / Info
	0 / USB B		Blank / Mute
	PgUp /		Shift + Up
	PgDn / S-Video		Shift + Down

