














 





 
 



 

 



 



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	OPT		Options
	Back		Back
	Exit		Exit
	EPG		Guide
	Info		Info


 




 
**Originalfernbedienung Ersatzfernbedienung**

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	TXT		Text
	TV/♪		TV/R





Originalfernbedienung    Ersatzfernbedienung

	*		Pre Ch
	APP		Media
	Disp		+  Shift + Info

Originalfernbedienung    Ersatzfernbedienung