





 




 
 
















 








Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	Open / Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV / DVD		AV / Input / RDS
	0		0
	TV / Radio		TV/Radio /
	I<<<		I<<< / Preset-
	Copy		Setup / OPT /
	Timer		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Repeat	 + 	Shift + Green / APP /
	Menu		Menu / Home
	Return		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Title List / Disc Menu		D.Menu / Top
	Info		Info / Angle
	Cancel		Exit / Cancel / Clear



