


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+	 + 	Shift + Guide
	Mute		Mute
	Title/TTX		Text
	Menu		Menu
	Display		Info

Originalfernbedienung Ersatzfernbedienung

	Prog / EPG		Guide
	Prog / EPG		Sleep
	PBC		Smart
	GOTO		Media
	Vol -		Vol -
	Vol +		Vol +
	Pause		Pause
	Play		Play
	Stop		Stop
	Setup		Options
	Return		Back
	Up		Up
	Left / Fav-		Left
	Enter		Ok
	Right / FAV+		Right
	Source		AV
	TV / Radio		TV/R



