




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Picture		Picture / Format
	Aspect		Shift + Picture / Format
	Sleep		Sleep / Timer
	Sound		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0




 











Originalfernbedienung Ersatzfernbedienung

	Recall		Back / Return
	Display		Display / Media
	Up		Up
	Input		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	EPG		Guide / EPG / -/-
	CH+		CH+ / Page+
	Vol-		Vol-
	Tv/Radio		TV/Radio /
	CH-		CH- / Page-
	Open/Close		Eject / Surround





 

 
 




Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subtitle / EQ
	CH List		Smart / List
	Rec		Rec / Rec Mode
	Rec List		D.Menu / Top
	Tv/TXT/D.Pro		Text / Goto
	Cancel/D.Rep		Shift + Exit / Cancel / Clear
	Reveal/D.Goto		Setup / OPT /
	Nicam/D.Slow		Audio / Lang I/II
	I<</Index		I<< / Preset-
	>>I/Hold		>>I / Preset+
	Size/D.Zoom		Zoom / Size
	Subpage/D.Title		Info / Angle
	<<		<< / Tune-
	>>		>> / Tune+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

	Red/D.Set		Red / Netflix / Search
	Green/D.Menu		Green / APP / Repeat
	Yellow/D.Sub		Yellow / YouTube / Repeat
	Blue/D.Lan		Blue / Prime Video / Random

