




 


 
 
 
 


 
 



 
 
 


 
 

 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Muting		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10/0		0
	>10		Guide
	Clear		Exit
	Preset Up		Up
	Preset Down		Down
	>>I		>>I

Originalfernbedienung Ersatzfernbedienung

	>>		>>
	<<		<<
	I<<		I<<
	Enter		Ok
	Treble		Info
	Bass		Back
	Repeat		Text
	CD Play/Pause		Play
	Tape <>		Pause
	Stop		Stop
	Tuner/Band		TV/R
	Shuffle/Program		Options
	Function		Menu
	Dimmer		Smart
	Sleep		Sleep
	Display		Shift + Info
	Volume+		Vol +





Originalfernbedienung Ersatzfernbedienung

	Volume-		Vol -
	Clock		3D
	Tuner Mode		Format
	Timer		Shift + AV
	Rev Mode		Subt
	AUX		AV

Originalfernbedienung Ersatzfernbedienung

