




 
 


 

 





 

 
 


 

 
 
 


 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 +  + 	Shift + Guide
	Recall		Back
	Sleep		Sleep
	Nicam / A2		Dual
	DVB		Media

Originalfernbedienung Ersatzfernbedienung

	TV / AV		AV
	Red		Red
	Green		Green
	Yellow		Yellow
	Cyan		Blue
	16:9		Format
	TXT / CC		Text
	Display		Info
	Picture	 + 	Shift + Format
	Menu		Menu
	Up / CH +		Up
	Up / CH +		Ch +
	Down / CH -		Down
	Down / CH -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left





**Originalfernbedienung Ersatzfernbedienung**

	Left / Vol -		Vol -
	Enter		Ok
	Sound	+	Shift + Dual
	Exit		Exit
	DVB Menu		D. Menu
	FAV		Pre Ch
	EPG		Guide
	Page +	+	Shift + Ch +
	Page -	+	Shift + Ch -
	List		List
	Radio		TV/R
	Pause		Pause
	Index		3D
	Lucidity		Smart
	Subpage	+	Shift + Subt
	Size		Eject
	Cancel	+	Shift + Exit

**Originalfernbedienung Ersatzfernbedienung**

	Hold		Stop
	Subtitle		Subt
	Reveal		Options

