








 

 

 

 



 
 
 

 
 
 

 

 
 
 






**Originalfernbedienung    Ersatzfernbedienung**

	Standby/On		Power
	Input Select		AV
	HDMI		D. Menu
	Open/Close/Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Setup		Options
	Clear		Exit
	Prog+		Ch +

**Originalfernbedienung    Ersatzfernbedienung**

	Prog-		Ch -
	Timer/Prog		Sleep
	[i+]		Info
	Text		Text
	Variable Skip/→		Media
	Variable Replay/→		Smart
	Guide		Guide
	Top Menu		Shift + Menu
	Menu/List		Menu
	Display		Shift + Info
	Return/Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter/OK		Ok
	Red		Red


 




Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow/System		Yellow
	Blue/Search		Blue
	<<		<<
	Play		Play
	>>		>>
	I<<		I<<
	Stop		Stop
	>>I		>>I
	Pause		Pause
	VCR		Shift + 1
	HDD		Shift + 2
	DVD		Shift + 3
	Time Shift		List
	Dubbing		Pre Ch
	Rec Speed		3D
	Rec		Rec

Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subt
	1.3x/0.8xPlay		Format
	Audio		Dual
	Sat.Link		TV/R
	A1		Shift + Subt

