


 

 

 




 

 

 









 


 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		Red
	DISC		Green
	TUNER		Yellow
	AUX		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Disc Menu		D. Menu
	OSD Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Vol +		Vol +
	Vol -		Vol -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	I<<		I<<
	>>I		>>I
	Stop		Stop
	Play		Play
	Pause		Pause
	I<<		<<
	>>I		>>
	Subtitle		Subt
	Angle		Smart
	Zoom		Eject



