

 
 


 



 


 










**Originalfernbedienung Ersatzfernbedienung**

|             |   |               |
|-------------|---|---------------|
| PWR On/Off  |    | Power         |
| Mute        |    | Mute          |
| Epg         |    | Shift + Guide |
| App         |    | Media         |
| Info        |    | Shift + Info  |
| Subt.List   |    | Subt          |
| Sleep Timer |    | Sleep         |
| TV          |    | TV/R          |
| Text        |    | Text          |
| TV/SAT      |    | AV            |
| Menu        |    | Menu          |
| Menu Up     |   | Up            |
| Display     |  | Info          |
| Menu Left   |  | Left          |
| OK Enter    |  | Ok            |
| Menu Right  |  | Right         |
| Exit        |  | Exit          |

**Originalfernbedienung Ersatzfernbedienung**

|              |   |       |
|--------------|---|-------|
| Menu Down    |    | Down  |
| Back         |    | Back  |
| Volume+      |    | Vol + |
| CH/Page+     |    | Ch +  |
| Volume-      |    | Vol - |
| Audio        |    | Dual  |
| CH/Page-     |    | Ch -  |
| 1. ?         |    | 1     |
| 2abc         |    | 2     |
| 3def         |    | 3     |
| 4ghi         |  | 4     |
| 5jkl         |  | 5     |
| 6mno         |  | 6     |
| 7pqrm        |  | 7     |
| 8tuv         |  | 8     |
| 9wxyz        |  | 9     |
| Guide Pilote |  | Guide |



