



 

 

 

 

 

 

 

 

 

 



 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Tv System		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Go to		Text / Goto
	0/Display		0
	Home		Menu / Home
	<<		<< / Tune-
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	Return		Back / Return
	Option		Shift + Setup / OPT / Tools
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	I<< Prev		I<< / Preset-
	Down		Down
	Vol+		Vol+
	Next >>I		>>I / Preset+
	Vol-		Vol-
	Subtitle		Subtitle / EQ
	Play		Play / Slow
	Stop		Stop / Hold
	Pause/Step		Pause / Step / Freeze
	Setup		Setup / OPT /
	Audio		Audio / Lang I/II



