
 

 
 




 

 





 
 






 




 




Originalfernbedienung Ersatzfernbedienung

PWR On/Off		Power
Mute		Mute
Epg		Guide
Info		Info
Opt?		Options
Subt.List		Subt
TV		TV/R
Video		D. Menu
Text		Text
TV/SAT		AV
Display		Shift + Info
Menu		Menu
Menu Up		Up
Menu Down		Down
Menu Right		Right
Menu Left		Left
OK Enter		Ok

Originalfernbedienung Ersatzfernbedienung

Exit		Exit
Back		Back
Volume+		Vol +
CH/Page+		Ch +
Volume-		Vol -
Audio		Dual
CH/Page-		Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
0/10		0



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Red		Red	
Green		Green	
Yellow		Yellow	
Blue		Blue	

