






























 












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Tv		Shift + Power
	Vol+ Tv		Shift + Vol+
	DVD		Shift + 2
	TV/AV Tv		TV/Radio /
	Vol- Tv		Shift + Vol-
	Tuner/Band		Shift + 6
	1		1
	2		2
	3		3
	Ext-In		Eject / Surround
	4		4
	5		5
	6		6
	FL Display		Display / Media
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	Vol+		Vol+
	Cancel		Exit / Cancel / Clear
	0		0
	+10/-10		Guide / EPG / -/-
	Vol-		Vol-
	▼		Shift + Down
	l<< Skip		l<< / Preset-
	▲		Shift + Up
	Skip >>l		>>l / Preset+
	<< Slow/Search		<< / Tune-
	Slow/Search >>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Top Menu/Direct Navigator		D.Menu / Top
	Up		Up





Originalfernbedienung Ersatzfernbedienung

	Menu/Play List		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Functions		Setup / OPT /
	Down		Down
	Return		Back / Return
	Subwoofer		Sound / Title
	SFC		Text / Goto
	-H.BASS/-C.Focus		Shift + Sound / Title
	Dolby/PL II		Audio / Lang I/II
	Sleep/-Setup		Sleep / Timer
	CH Select/-Test		Smart / List
	Play Mode		Shift + Play /
	Muting		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

