



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-------|
|  | Standby |  | Power |
|  | USB / Card |  | Media |
|  | Open / Close |  | Eject |
|  | Audio |  | Dual |
|  | Subtitle |  | Subt |
|  | Search |  | TV/R |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Clear |  | Exit |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|---------------|
|  | Menu |  | Menu |
|  | Setup |  | Options |
|  | Display |  | Info |
|  | Title |  | Smart |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | << REV |  | << |
|  | >> FWD |  | >> |
|  | I<< PREV |  | I<< |
|  | >>I NEXT |  | >>I |
|  | II> Step |  | Shift + Pause |
|  | Stop |  | Stop |
|  | Play / Pause |  | Play |
|  | Play / Pause |  | Pause |



