



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	USB / Card		Media
	Open / Close		Eject
	Audio		Dual
	Subtitle		Subt
	Search		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Setup		Options
	Display		Info
	Title		Smart
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	<< REV		<<
	>> FWD		>>
	I<< PREV		I<<
	>>I NEXT		>>I
	II> Step		Shift + Pause
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause





Originalfernbedienung Ersatzfernbedienung

	Vol +		Vol +
	Vol -		Vol -
	Repeat		Text
	A-B		D. Menu
	Angle		Format
	Mute		Mute
	L/R		Ch +
	N/P		Ch -
	PBC		3D
	Slow		Shift + Play
	V-Mode		AV
	Return		Back
	HD / Res		Red
	Program		Sleep
	Zoom		Shift + Eject

Originalfernbedienung Ersatzfernbedienung

