

 

 
 
 


 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	CBL / SAT		1
	DVD		2
	Blu-ray		3
	Game		4
	Aux		5
	Media Player		6
	iPod / USB		7
	TV / Audio		8
	Tuner		9
	Network		Guide
	Media Server		0
	Internet Radio		Pre Ch
	Channel +		Ch +
	Channel -		Ch -
	Page+		Shift + Ch +

Originalfernbedienung Ersatzfernbedienung

	Page-		Shift + Ch -
	Green / Movie		Green
	Red / Music		Red
	Blue / Game		Blue
	Yellow / Pure		Yellow
	Info		Info
	Option		Options
	Option		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Back		Back
	Setup		Smart
	Volume+		Vol +
	Volume-		Vol -



