















 

 




 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	Nicam / A2		Shift + Audio / Lang I/II
	Aspect		Zoom / Size
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	--/		Shift + Guide / EPG / --/
	0		0

Originalfernbedienung Ersatzfernbedienung

	Recall		Back / Return
	FAV		Fav / Marker / PC
	Freeze		Pause / Step / Freeze
	TV / Radio		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Sleep		Sleep / Timer
	Up		Up
	EPG		Guide / EPG / --/
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear



